Resetting a Monitor's Display Settings

Occasionally, patrons will adjust the display settings on a computer's monitor, such as the brightness, contrast and color balance. This sometimes causes certain colors become invisible. An example of this is the grid lines in Excel, which becomes problematic during classes.

To fix this issue, you must use the buttons located on the monitor itself, separate from anything you would do within the operating system.

To reset a monitor's display settings:

1. Press any one of the four buttons on the side to open the menu.



2. Press the third button to open the main menu.



3. Use the top two buttons to navigate to Other Settings. Then press the third button to select it.

Dell U2412M		Energy Use IIIIIIIIIIIIIIIIIIIIIIII		
• Brightness/Co	ontrast Language	▶ English		
Auto Adjust	Menu Transparency	▶ 20		
UK 🔁 Input Source	Menu Timer	▶ 20 s		
🖧 Color Setting	Menu Lock	▶ Unlock	La J	This DC
🚥 💴 🗖 Display Setti	ngs Menu Rotation		Patron Drive	
Other Settin	Energy Smart	▶ Off	0	• v
★ Personalize	Power Save Audio		1000	12
	DDC/CI	▶ Enable	DVD Onve Fu	ısh Driv 🔶
	LCD Conditioning	▶ Disable		~
	Factory Reset	Reset All Settings	and the second	
Resolution : 1	020x1200@60Hz			9:54 AM 11/11/2017
			Contrast (Martin State	

4. Use the **top two buttons** to navigate to **Factory Reset** (at the bottom of the list). Then press the **third button** to select it.

Brightness/Contrast Language > English Auto Adjust Menu Transparency > 20 Input Source Menu Timer > 20 s Color Settings Menu Lock > Unlock Display Settings Menu Rotation Patron Drive Other Settings Energy Smart > Off				and the second se		
Auto Adjust Menu Transparency > 20 Input Source Menu Timer > 20 s Color Settings Menu Lock > Unlock Display Settings Menu Rotation Patton Drive Other Settings Energy Smart > Off			▶ English	Language	Brightness/Contrast	D-
Input Source Menu Timer ▶ 20 s Color Settings Menu Lock > Unlock Display Settings Menu Rotation Patron Drive Other Settings Energy Smart > Off			▶ 20	Menu Transparency	Auto Adjust	Ð
Color Settings Menu Lock Unlock Display Settings Monu Rotation Patron Dree Other Settings Energy Smart Off			▶ 20 s	Menu Timer	Input Source	€
□ Display Settings Menu Rotation Patron Drive ▲ □ Other Settings Energy Smart ▶ Off ● ▼	This PC	Temporary	▶ Unlock	Menu Lock	Color Settings	•
Ther Settings Energy Smart ▶ Off ▼	^	Patron Drive		Menu Rotation	Display Settings	
	• v	0	▶ Off	Energy Smart	Other Settings	#
Personalize Power Save Audio	19	1		Power Save Audio	Personalize	×
DDC/CI Enable DVD Drive Experience	ısh Driv 🧹	DVD Onve Flas	▶ Enable	DDC/CI		
LCD Conditioning Disable	5		▶ Disable	LCD Conditioning		
Factory Reset Reset All Settings 954 AM	954 AM	-	Reset All Settings	Factory Reset		
	11/11/2017	11		Hz	Resolution : 1920x1200@60	

5. A confirmation will appear in the center of the screen. Use the **top two buttons** to highlight **Yes**. Then press the **third button** to select it.

